

The U-Shape Flexible Trim is meant to cover mostly non-straight edges of 1/2" and 3/8" rigid boards. It has to be applied using double sided tape

**REQUIRED**


**Double sided tape:**

- 3/4" thickness - 1/2" (13mm) thick board
- 1/2" thickness - 5/8" (10mm) thick board



**STEP 1:**

Attach double sided tape to the board edge. Make sure it is centered with the excess evenly distributed on both sides.

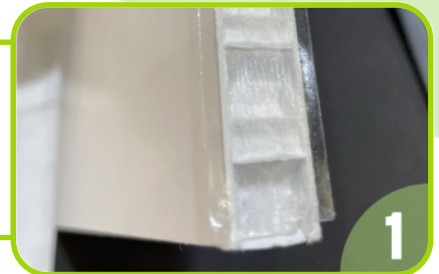

**STEP 2:**

Apply the U Shape trim on the edge of the material. Put pressure on the front and sides of the trim to make sure it adheres well to the board on all contact points.



**STEP 3:**

In case of applying the U Shape Trim to curved edges, make the trim lay down naturally in place without stretching it to avoid potential disatchment.



Manufactured by: